Android 2.1

User Manual

Directory----------1
1.Use statement----------2
2.Appearance Description----------2
2.1 Overall structure----------2
2.2 Button, and plug-ins----------3
3. The description of menu interface----------5
3.1 Desktop description----------5
3.2 Status Bar Description ----------5
4.Basic set of equipment ----------6
4.1 Wireless Control ----------6
4.2 Sound and display----------7
4.3 Security and location----------7
4.4 Date and time----------8
4.5 Regional and text----------8
4.6 Battery Charging----------9
5. Software installation and management------9
5.1 Browser----------9
5.2 E-mail----------10
5.3 Google Map ----------10
5.4 Alarm clock ----------11
6. O / I File Manager ----------11
7.FAQ----------12
7.1 Can not open the media player--------12
7.2 Screen flashing----------12
7.3 Headphones can not hear sound------12
7.4 Can not copy the file----------12

1.Use statement

Statement: The company are committed to quality innovation and continual improvement of software.If the final version of products has any differences from the description of the user guide ,please subject to the final product .Thank you.

2.Appearance Description

2.1 Overall structure

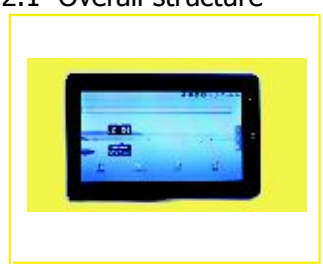

2.2 Button and plug-ins

USB to Rj45

Power-on /off button

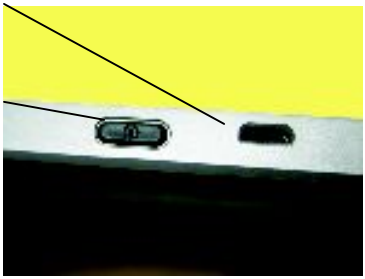

USB to Rj45

Power-on/off

TF neck

Software menu

Back key

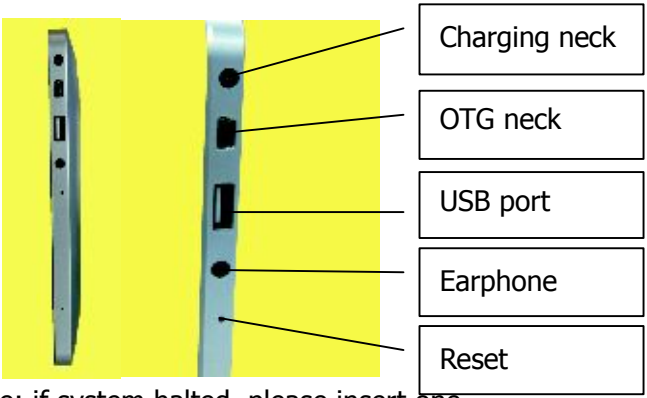

Note: if system halted, please insert one slender material into the reset key ,then system will shutdown

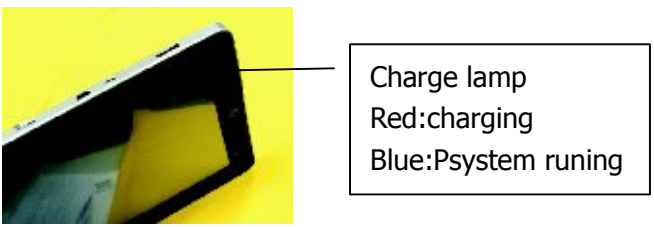

insert an external charger, then charge lamp will light;
When charge is completed,charge lamp will light out

3.The description of menu interface

3.1 Desktop description

With Pressing the icon" ", you can enter menu and choose the options you need, such as email settings and so on

3.2 Status Bar Description

The status bar is located on the top screen

On the top screen,it shows the followings from left to right: WIFI connect status, slient mode key , battery residual Two Volume adjustment keys,return key,menu key,Home key ,Current time

4.Basic settings of e-pad devices

4.1 Wireless Control
press the set-up" " in the menu page to enter set-up interface

WI-FI settingsp:set up and manage the notice of access point to the wireless

.When The icon showed on the right is " ",that means WIFI is in the state of close

click network notification .When the right icon shows " ,it means device is scanning the network that is available The device will search automatically and add the nearby wi-fi network which can be connected. click wireless network port and then you can connect network.

4.2 Sound and display

silent mode: All sound will become silent except for media and alarm
The Volume of media: Adjust the volume of media by dragging the move point to right or left
Direction: It will change the direction automatically when you rotate the MID
Cartoon: It will show cartoon when you open or close a window
Brightness: Adjust the brightness of screen by dragging the point to the right or left

Idle screen:There are six kinds of time interval for your choose for idle screen: 15 seconds,30 seconds,1 minutes,2 minutes,10 minutes and 30 minutes.

4.3 Security and location

safety and location: set up my location and password selections,Useing of wireless network: you can check the location of application by using wireless network
Visible password: it will show your password when you typing them

4.4 Date and time

Date and time: set up date ,time ,time zone and format
Set up date and time: enter the interface of date setting to set up the date and time
Select time zone: enter the interface of time zone to set up the time zone
Set up time format: set up the display format of time
Choose date format:Choose different display formate of date

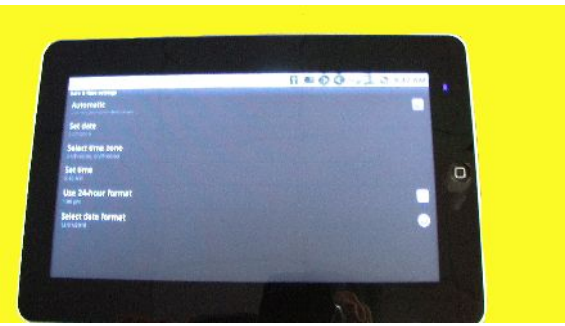

4.5 Locatel and text

set up the locate (language and area),text entry and automatic error correction
Select area:There are 54 kinds of language for choise

4.6 Battery Charging

There is a built-in battery,.when the battery level is low , the system will recommend you to charg.

Way to chargeing: One end of the adaptor connect to socket,another end connect to the power port of the device.

1, When the indicator light of battery chargeing turns on , it means device is charging.

When the indicator light turns to green. it means battery is full.

2, During the charging period, user can still use the Pc.

Note: In the boot of state, .it takes long time for charging..

5. Software installation and management

5.1Browser

Click" " and open the following web page Start: enter website by inputting web address

5.2 E-mail

Click E-mail icon" " and enter the e-mail,
You can proceed as follows:
1、Set an e-mail account
2、Open a new e-mail
3、Send and receive e-mails
Note: Shortcut menu will popup when clicking the menu button..

5.3 Google map

Click" " and entert GoogleMap

--Click the zoom icons on the touch screen to zoom in and zoom out images
--Drag touch screen,move the image up-and-down and right-and-left
Click Menu :
--search:search maps by entering address
--Line :search drve circuit by entering starting and finishing address
--Map mode:three modes for choise,map mode、satellite mode and trafic mode.
--My position:Find out my current location by setting up "My Location"
--more:more information about Google Map

5.4 Alarm clock

Click " " and enter the alarm clock settings

Set up time :Enter the interface of time settings to set up time.
Set up hour formate:set up displaying format of time
Select the formate of date: choose different format to show date.

6.O/I File Manager

Click " " and enter O/I File manager, you can browse the files in the e-pad and T-Flash memory card .
Short click the menu key or click the mean software on the screen to bring up the operator interface.
Operation: bring up the operation interface
--Cut: Cut a file or folder
--Copy: Copy a file or folder
--Delete: Delete a file or folder
--Rename: Rename a file or folder

--Select all :Select all files or folders
--New:creat a new interface
--File :creat a new file
--Folder :creat a new folder
--Search: Search files or folders

7. FAQ

7.1 Can not open the media player
--Check battery
-Connect the power adapter and then check again
--If it is still cannot be opened, please contact our sales person

7.2 Screen is flashing after starting up
--short of power ,please charge

7.3 Headphones can not hear sound
--please check whether the volume has been set to 0
--please check whether the music file has been damanged. Try playing other music to determine. If the file has been damaged, it could lead to serious noise or skips.

7.4 Can not copy the file
--Confirm whether the computer and the player is properly connected
--Confirm whether the storage space is full